

9 Loading postage – TELESET

TELESET is the loading of the desired postage credit via modem. The modem is built into the ultimail. To load postage a connection is made to the TELESET data center with the ultimail and the desired amount is loaded. Accounting is as per your contract with the United States Postal Service.

Make sure that the ultimail is connected to the phone line and that all selection parameters for the modem are correctly set (see Chapter 11.16 on page 97).

Permissible amounts which may be loaded:


Amounts in steps of \$ 10 up to a maximum of \$ 99.000 are permissible.

The maximum amount which may be loaded is dependent on the postage credit still available at your ultimail. When topping up, you must not exceed the upper postage credit limit of \$ 99,999.99.

SELECT TELESET	
<input checked="" type="radio"/> TELESET MODEM	<input type="radio"/>
<input type="radio"/>	<input type="radio"/>
<input type="radio"/> SET UP MODEM CONFIGURATION	<input type="radio"/>
<input type="radio"/> BOOKING REPORT FOR LAST LOAD PROCEDURE	<input type="radio"/>
Please select a function.	

LOAD TELESET	
<input type="radio"/>	<input type="radio"/>
<input type="radio"/>	<input type="radio"/>
<input type="radio"/>	<input type="radio"/>
<input type="radio"/>	<input type="radio"/>
TELESET (remote setting) successfully completed. New R1 register value (DESCENDING):	\$ 1,150.16
<input type="radio"/>	<input checked="" type="radio"/> CONTINUE
Press CONTINUE to close the procedure.	

Loading postage

- Open the TELESET menu with the  key.
- Select TELESET MODEM to start the TELESET procedure.

Now simply follow the instructions in the display.

- Maintain the indicated loading amount or overwrite with a new amount. Acknowledge with CONTINUE.

After a security prompt the ultimail establishes a connection with the TELESET data center. Messages in the display will inform you about the status (connection establishment, data transfer...).

Please note: If you have entered a new reset amount, you will be asked to confirm the process again within 30 seconds.

At the end of the remote setting, the ultimail will show the new descending.

- Press CONTINUE to end the TELESET process.