



8 Loading postage

Depending on the features of your JetMail regulations set by your national post office, you can load postage

- via internal modem through the TELESET Data Center (TELESET)
- via telephone through the TELESET Data Center (TELESET voice)
- at your local post office.



Some postal services offer discounts above certain minimum loading values. Please contact your postal service for the latest information.

8.1 Loading postage via modem / TELESET *(optional)*

With TELESET modem, you load postage directly into your JetMail via an internal modem. Your PIN (Personal identification number) can be found on the TELESET card supplied with your JetMail.

If you use a docking station for communication with the TELESET Data Center, please read the instructions supplied with the docking station *(optional/not available in all countries)*.

- Make sure JetMail is connected to an analog phone outlet.
- Make sure JetMail is switched on:
 - power switch in I position
 - access card inserted.

Please note: Access to the TELESET menu will be possible only if the current access card is authorized for TELESET.

Loading postage • In the READY MODE, press the  key.



TELESET

VER. 011-002-031-011-011

ENTER PERSONAL IDENTIFICATION NUMBER:

[00000000]





```
TELESET
-----
VER. 011-002-031-011-011
ENTER PERSONAL IDENTIFICATION NUMBER:
[00000000]
CONT. CANCEL
▼
[S1] [S2] [S3] [S4] [S5]
```

- Type in your 8 digit PIN as shown on your TELESET card. Entered PIN digits will appear in the Display as “*”.
- Confirm your entry with the key.

Wrong PIN Delete an incorrect input place by place by pressing the key.

Please note: After 8 consecutive attempts to confirm an incorrect PIN, JetMail will shut down and lock itself. A customer service technician must be called to reset your JetMail.

JetMail opens the TELESET menu.

TEL ESET menu

```
TELESET
-----
PLEASE SELECT:
- MODEM OR
- OPERATOR OR
- MODEM SET-UP
MODEM OPERAT. SETUP CANCEL
▼
[S1] [S2] [S3] [S4] [S5]
```

- Press the key for MODEM.
- Now follow the instructions in the display.

After confirming amount, the procedure runs automatically.